


# TAN.SCREEN

## OPERATION MANUAL


### REMOVING FROM PACKAGING

**IMPORTANT!** It is essential for the Tan.Screen to be removed correctly to avoid the black panels from falling out and the Aluminum frame not being level and secure. If the Frame is not secure, it will not be level when assembled.


Steps to remove the Tan.Screen from it's box correctly:

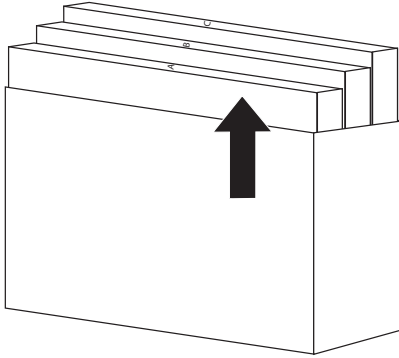


1. You must remove BOX A, B & C from its outer carton first.

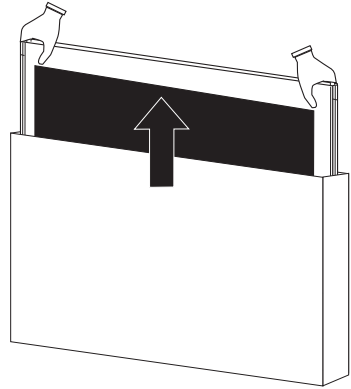


2. Remove each screen section from it's box, ensuring you use both hands and pull out of the box holding each left and right corner of the frame.

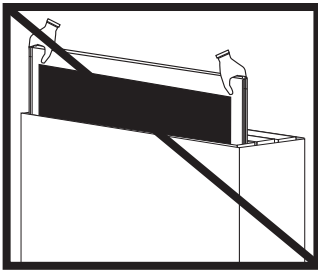

DO NOT REMOVE EACH TAN.SCREEN SECTION FROM THE OUTER CARTONS OF THE BOX

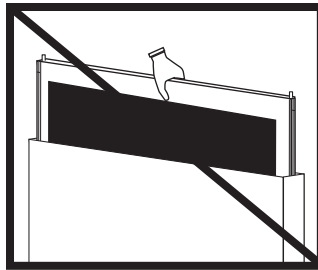

DO NOT USE ONE HAND TO REMOVE THE TAN.SCREEN SECTION OUT OF THIS BOX.

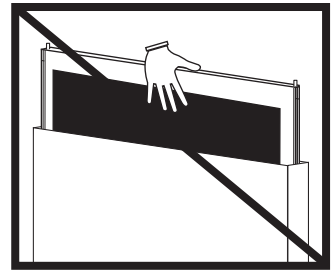

DO NOT REMOVE TAN.SCREEN SECTION HOLDING THE BLACK PANEL.

IF THE FRAME APPEARS TO BE NOT LEVELED OR THE BLACK PANELS HAVE BECOME LOOSE PLEASE REFER TO PAGE 7 OF THIS MANUAL : CHANGING THE PANELS & LEVELING OUT THE ALUMINUM FRAME.

REGISTER YOUR  
2 YEAR GUARANTEE




## ASSEMBLY: TAN SCREEN

There are 3 x Screen sections that make up the final Tan.Screen. This is labeled on each box (Outer Carton). Each screen section is to be assembled in order A (Bottom Piece)-B (Middle) and then C(Top Piece).


**TIP:** There are two sides of the screen. The back contains the seal. The seal is located around the black panel. Make sure this side faces to the back.

### REFER TO DIAGRAM:


1. To begin, open the package and position the Tan.Screen in your salon or space. Allow for the necessary room around the unit for free movement and enough room at the back of the screen to get access to.
2. Start with Screen Section A. Place Screen Section B onto Screen Section A. Each section simply stacks on top of each other by the metal posts.
3. Simply slot Section B into A.
4. Slot Section C in B.

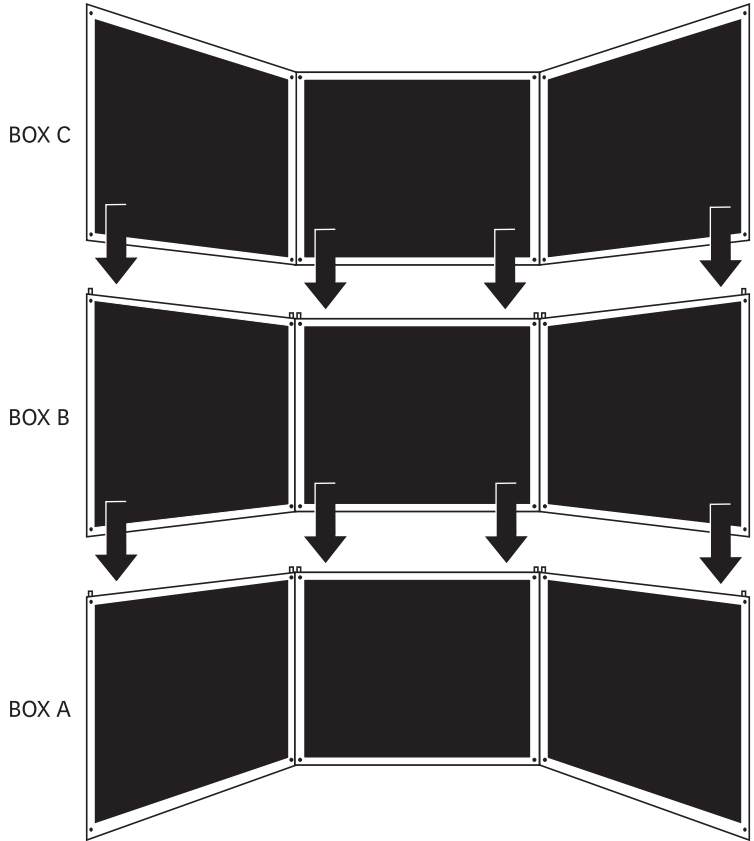

### SLOTING EACH SCREEN PANEL TOGETHER:

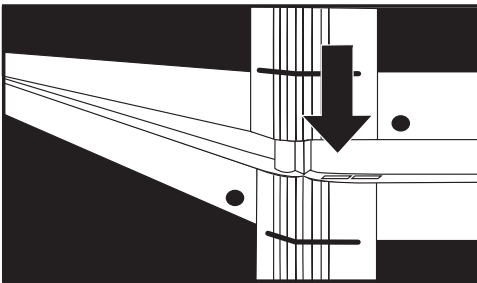

### SECURED IN PLACE:

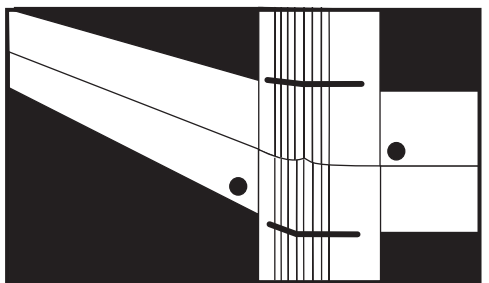

Each section simply slots into one another as shown below. The Aluminum Frame will be level and secure in place. Please note: No screwing or tightening is needed. If the panels are not level and fit in place, please refer to Page 7 of this manual **ASSEMBLY: ALUMINUM FRAME: CHANGING THE PANELS & LEVELING OUT THE ALUMINUM FRAME.**

# TAN.SCREEN WITH EXTRACTION


## ASSEMBLY: TAN FRESH AIR SCREEN WITH EXTRACTION

There are 3 x Screen sections that make up the final Tan.Screen. This is labeled on each box (Outer Carton) Each screen section is to be assembled in order A (Bottom Piece)-B (Middle) and then C(Top Piece).

TIP: There are two sides of the screen. The back contains the seal. The seal is located around the black panel. Make sure this side faces to the back.


### REFER TO DIAGRAM:

1. To begin, open the package and position the Tan.Screen in your salon or space.  
Allow for the necessary room around the unit for free movement and enough room at the back of the screen to get access to.
2. Start with Screen Section A.  
Place Screen Section B onto Screen Section A.  
Each section simply stacks on top of each other by the metal posts.
3. Simply slot Section B into A.
4. Slot Section C in B.

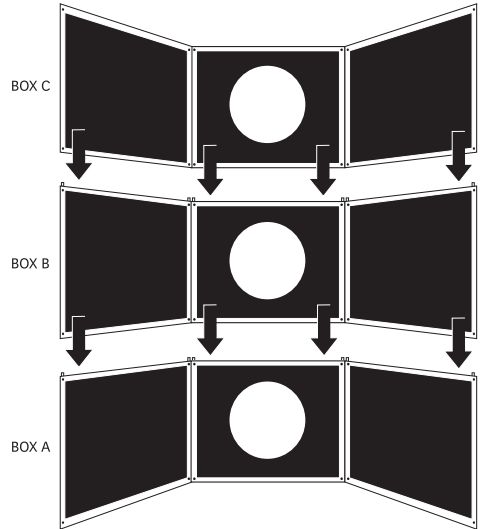


### REFER TO DIAGRAM:

1. To attach each Tan.Fresh Air Unit, go to the back on the Tan.Screen and locate the open slots at the top of each center screen section.
2. Insert the Tan.Fresh Air fan unit in each slot to fix into screen as pictured.

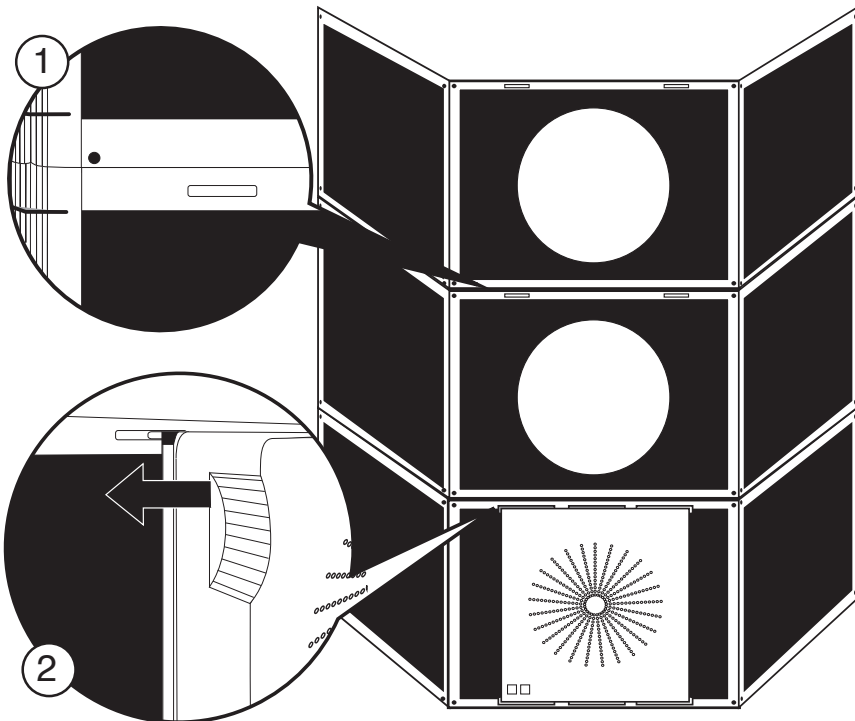

## ASSEMBLY: TAN FRESH AIR FANS

All 3 fans can be piggy-backed onto one another. Simply attach all 3 fans to the back of the screen. Then connect all fans to the back of the fan with the main power source using the connecting cords provided. It is best to use the bottom fan as the main power source for safety and ease of use.

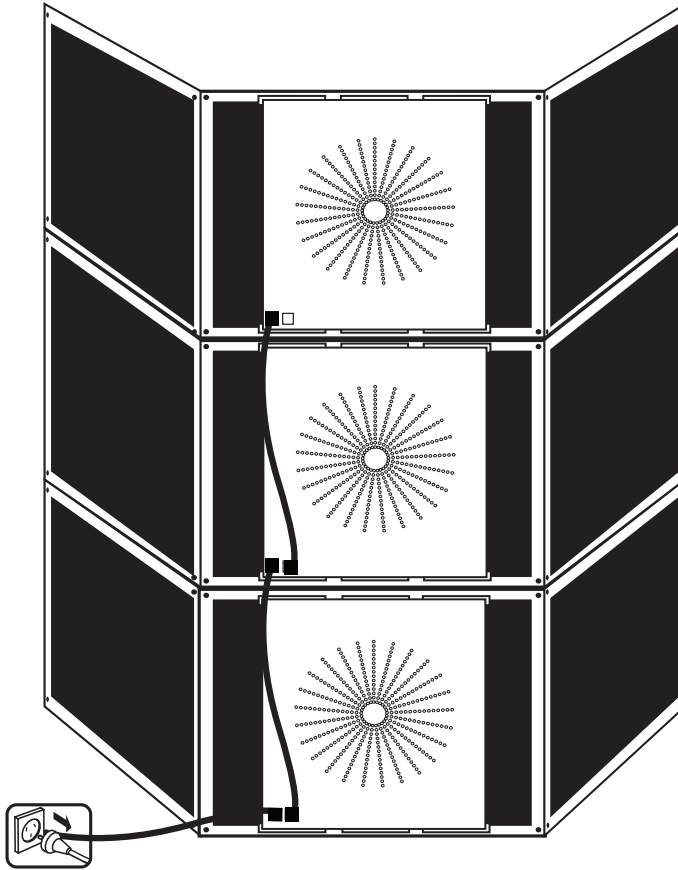

## IMPORTANT SAFETY PRECAUTIONS

SAVE THESE INSTRUCTIONS. THIS PRODUCT IS INTENDED FOR PROFESSIONAL USE ONLY. BEFORE USING THIS TAN.EASY PRODUCT, READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE DEVICE.

1. Adult assembly required. Never let small children near this product.



Do not use near open flames

## IMPORTANT

WIPE DOWN TAN.  
SCREEN WITH A DAMP  
CLOTH AFTER USE.



## CLEANING & MAINTENANCE



If the Tan.Screen gets dirty with overspray solution, wipe down with Tan.Easy Cleaning Wipes. Alternatively you can use a smooth cloth (avoid anything abrasive) with a general household glass cleaner to maintain its clean finish.

# TROUBLESHOOTING

If you experience problems with your Tan.Easy Pro Tools device, in the first instance please read carefully through this Trouble Shooting section. If you cannot solve your problem please contact us for assistance. If you have further issues, please fill in a warranty claim at [taneasyprottools.com](http://taneasyprottools.com)

## PROBLEM

The Black Panels have become loose or have fallen out.

## REASON

- The Tan.Screen Section has not been removed from the box correctly
- The Panel has become loose in transit
- The Aluminum Frame has become loose and needs to be tightened.

## ACTION

Refer to Page 7 of this Manual: Assembly: Alluminum Frame.

## PROBLEM

The Tan.Screen does not appear level and straight when assembled.

## REASON

- The Aluminum Frame has become loose and needs to be tightened.

## ACTION

Refer to Page 7 of this Manual: Assembly: Alluminum Frame.

## PROBLEM

My Screen will not fit together correctly and I have metal posts sticking out at the top and bottom.

## REASON

- Each section has not been stacked correctly
- Some Sections have been stacked with front facing or back facing.

## ACTION

- Ensure you have stacked each section correctly, Section 'A' being on the bottom, Section 'C' being the top.
- Ensure each section is facing all the same way (Front & Back) when stacking on each other.
- Refer to Page 4 of this Manual: Assembly : Tan.Fresh Air Screen.



# WARRANTY & GUARANTEE

---

## TAN.EASY GUARANTEE

### 2 YEAR TROUBLE FREE WARRANTY

Congratulations on your purchase. We trust you will be happy with your purchase as the products are designed to give you many years of service.

To activate your Guarantee, please complete the information within 30 days of purchase.

This form has details of our guarantee terms & conditions so please read it carefully, fill it in and return it to the address at the back of this manual.

Alternatively you can register online at [www.taneasyprotools.com](http://www.taneasyprotools.com).

Keep this form, with your original proof of purchase for any claim under guarantee.

If you have any queries or require further information on your product please contact your local representative of Tan.Easy Pro Tools Products.

### GUARANTEE PERIOD BY PRODUCT

**2 YEARS** All products (Parts Only)

**LIFETIME GUARANTEE:** Handy.Tan Spray Gun

**PLEASE NOTE:** Shipping or return expenses are not covered.

### TERMS & CONDITIONS

If within two (2) years from the date of purchase, the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit, which may be new or refurbished. This guarantee applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost. This excludes the Handy.Tan Spray Gun, which has a lifetime guarantee. Prior to making a claim, please ensure you have read all trouble-shooting questions at [www.taneasyprotools.com](http://www.taneasyprotools.com). If there is a defect with the device, it will be replaced free of charge with a comparable unit.

Guarantee shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under this guarantee:

1. To repair damage resulting from attempts by personnel other than authorized representatives to install, repair or service the product.
2. To repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution.
3. To perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed.
4. To repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications.

### EXTENDED WARRANTY

Tan.Easy Extended Warranties can be purchased anytime within the first 30 days of your product purchase through the website - [www.taneasyprotools.com](http://www.taneasyprotools.com).

Extended Warranty through Tan.Easy provides the peace of mind, certainty and convenience of having the whole repair/replace-ment process managed for you in respect of most mechanical and electrical failures, including failures caused by wear and tear, during the period of your Extended Warranty and after the expiry of the first 2 years Guarantee.

**PURCHASE YOUR EXTENDED WARRANTY ONLINE : [www.taneasyprotools.com](http://www.taneasyprotools.com).**

**REGISTER YOUR  
2 YEAR GUARANTEE**



# ⚠ WARNING & SAFETY

## IMPORTANT SAFETY PRECAUTIONS

BEFORE USING THIS TAN.EASY PRODUCT, READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE DEVICE.

When using an electrical appliance, basic precautions should always be followed, including the following:


## WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. Do not leave product when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Use this device only for its intended function and do not use attachments not recommended by the authorized Tan.Easy Pro Tools manufacturer.
5. Do not use the device if the cord is damaged. In the event of damage discontinue use immediately. If the supply cord is damaged, it must be replaced by the authorized Tan.Easy manufacturer.
6. If device is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, do not use, contact Tan.Easy Pro Tools Customer Care via the website or regional telephone number.
7. Do not pull or carry by cable, use cable as a handle, close a door on cable, or pull cable around sharp edges or corners. Keep cable away from heated surfaces.
8. Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.
9. Do not handle plug with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow. Switch off and unplug the product before attempting to remove any blockage.
11. Turn off all controls before unplugging.
12. Do not spray flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. Do not use without the filter in place.
14. Never look directly into the airflow when device is in use.
15. Do not use an extension cord unless the cord complies with local regional electrical safety standards
16. Periodically inspect the power cord for signs of damage

### SAVE THESE INSTRUCTIONS

This product is intended for professional use only.

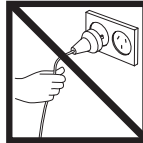

Do not pull on cable.



Do not submerge in water or get wet.



Do not use near open flames

## FOR MORE INFORMATION

ONLINE  
VISIT OUR WEBSITE FOR MORE INFORMATION  
[WWW.TANEASYPROTOOLS.COM](http://WWW.TANEASYPROTOOLS.COM)

